

Fluorinated Solvent

ZEORORA[®]

ZEORORA[®] H **ZEORORA[®] HTA**




Environmentally Friendly

ZEON

ZEON CORPORATION


What is "ZEORORA® H" ?

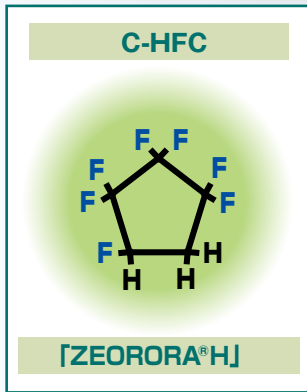


"ZEORORA®" is Fluorinated Solvent developed by Zeon & AIST*. This solvent is non flammable and environmentally friendly. "ZEORORA® H" is used as solvent for many applications, and "ZEORORA® HTA" is cleaning solvent.

AIST*: National Institute of advanced industrial; science and technology

Cleaning performance of ZEORORA® HTA

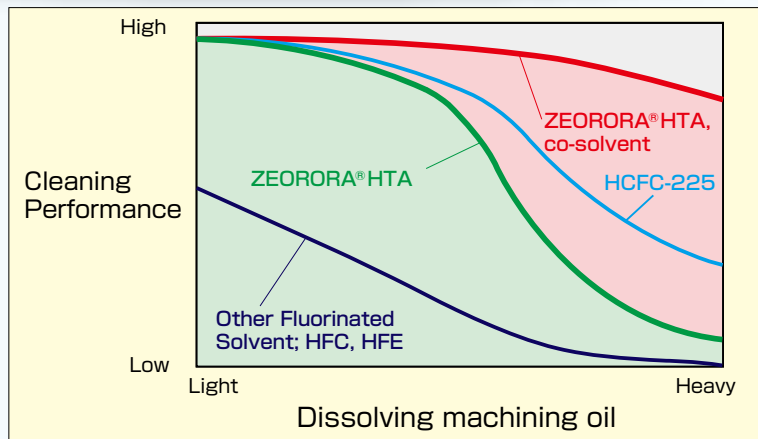

Features of ZEORORA® H & ZEORORA® HTA

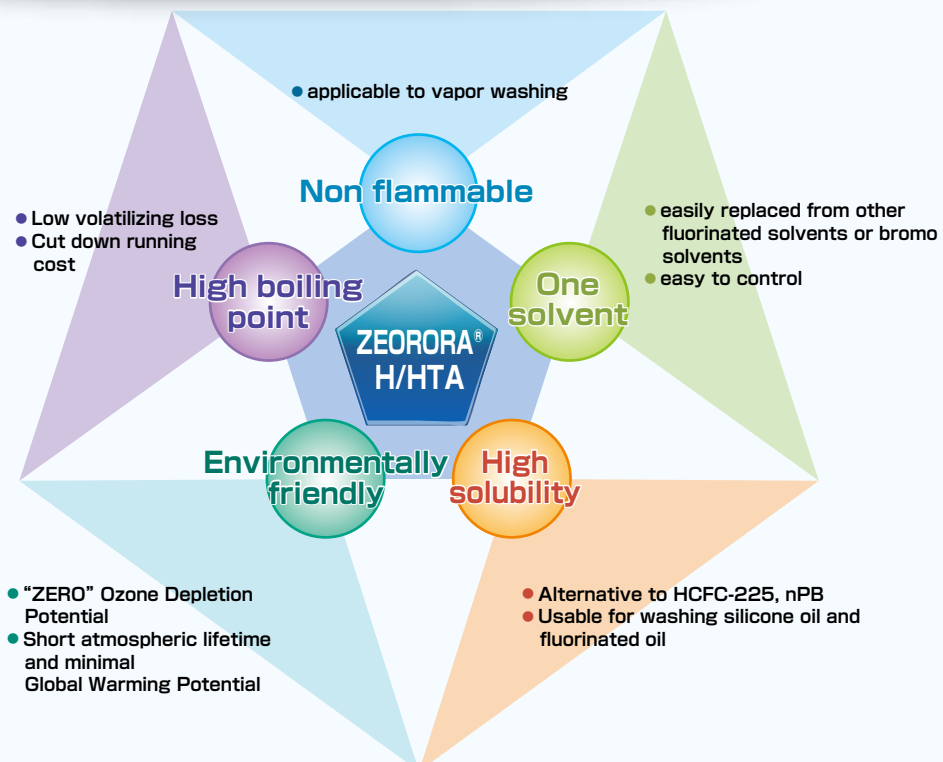



Physical Properties of ZEORORA[®] H/HTA

	Neat	Azeotrope
	ZEORORA [®] H	ZEORORA [®] HTA
Specific Gravity [25°C]	1.58	1.50
Boiling Point (°C)	82.5	82
Viscosity (mPa·S) [25°C]	1.59	1.47
Surface Tension(mN/m) [25°C]	19.6	19.2
Specific Heat (kJ/kg·K)	1.11 (19°C) 1.23 (35°C)	1.28 (25°C)
Vapor Pressure (MPa) [20°C]	0.0083	0.0083
Evaporative Latent Heat (kJ/kg) [boiling point]	144	161
Vapor Density (air=1)	6.81	6.65
Melting Point(°C)	20.5	6~10
Flash Point(°C)	None	None
Range of Explosion (vol%) [82°C]	None	4.9~12.9
Solubility to Water (g/100g Water)	0.072	—
Decomposition Test (ARC test)(°C)	None(under 350°C)	—
KB value	14	20



Comparison of Environmental Properties

Category	C-HFC	HCFC	HFC	HFC	HFE	HFE
	ZEORORA [®] H	HCFC-225	HFC-43-10mee	HFC-365mfc	HFE-449s1	HFE-347pc-f
Formula	c-C ₅ F ₇ H ₃	CClF ₂ CF ₂ CHClF	CF ₃ CF ₂ CHFCHFCF ₃	CF ₃ CH ₂ CF ₂ CH ₃	C ₄ F ₉ OCH ₃	CF ₃ CH ₂ OCF ₂ CF ₂ H
Ozone Depletion Potential (ODP)	0	0.03	0	0	0	0
Atmospheric Lifetime (year) [IPCC AR5]	2.8*	5.9	16.1	8.7	4.7	6.0
Global Warming Potential (GWP) 100years [IPCC AR5]	175**	525	1650	804	421	889

* N.Zhang, et al, Chem. Phys. Lett., 619(2015). 199-204

** A. Sekiya, JSPS, 155-104, April 2016.



Toxicity

Impact on fish	Low fish toxicity, No fish bioaccumulation
Acute Toxicity (Inhalation)	LD50 = 14213 ppmV (Rat, 4 hours)
Acute Toxicity (Oral)	LD50 > 2g/kg (Rat)
AMES study	Negative
Chromosomal aberrtion test	Negative (Mouse)
Teratogenicity	Negative
Skin Corrosion/Irritation	No irritation
Eye damage/irritation	Weak



Effect on elastomers & plastics

Test piece	Rate of dimensional variation(%)	Rate of weight variation(%)	Test piece	Rate of dimensional variation(%)	Rate of weight variation(%)
Polyacetal	0.3	0.0	PPS	-0.4	0.0
Polystyrene	0.1	0.0	PTFE	0.0	0.1
Acrylonitrile Butadiene Styrene	0.1	3.4	PU	2.5	8.4
Polycarbonate	0.2	0.0	Glass epoxy	-0.4	0.0
Polyvinyl Chloride soft	-3.5	0.1	Acrylic resin	Melting	-
Polyethylene	0.2	0.5	CR	0.5	-0.1
Phenol Formaldehyde(Resin)	0.0	-0.1	NBR	10.7	5.4
Polyvinyl Chloride hard	-1.9	0.1	SBR	1.0	0.4
Nylon 66	0.0	-0.3	Fluororubber	8.3	11.3
Polypropylene	0.3	0.1	Silicone rubber	4.5	8.7

Size of test piece:50×25×2mm

Washing Condition : Immersion in boiling ZEORORA®HTA for 5 min ⇒ in cool bath (25°C) for 5min ⇒ Vapor cleaning

Measurement condition : Measure in 5min after cleaning



Applications of ZEORORA®H/HTA

Cleaning

- Object ; Precision metal parts, Electronic parts or elements, Ceramic parts, Glass parts or lens,
- Purpose ; Degreasing, Removal of liquid crystal, flux, particles, fluorocarbon oil, epoxy resin (uncured), pigment.

Solvent of reaction, polymerization, Electronics materials.

- Solution : Solvent of fluorocarbon polymers
- Purpose : Water-repellent, Oil-repellent, Lubrication, Release

Admixture of fluorine type solvent

- Purpose ; Improving Cleaning, Non-flammable, Drying performance




Washing System of ZEORORA® HTA

ZEORORA® HTA can degrease engineering oil (light - medium) with “single solvent system” and can achieve higher cleaning level with “co-solvent system”


* Co-solvent system : Rinse and vapor cleaning with ZEORORA® HTA after cleaning with hydrocarbon type combination solvent (for example)

Cleaning System

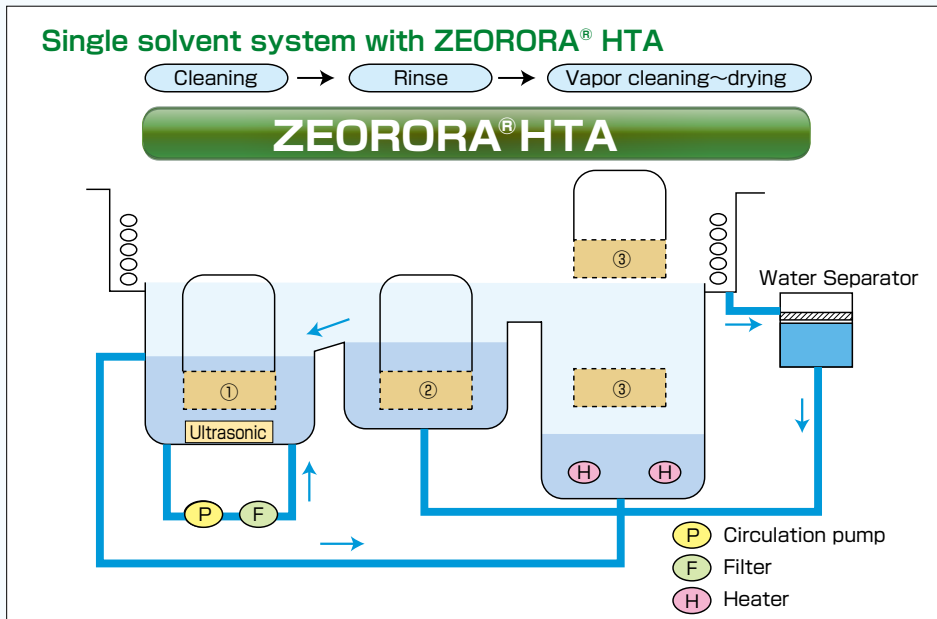

Cleaning Method :

- ① Hot bath with Ultrasonic vibration remove smear.
- ② Cool bath acts as immersion rinse and cool downing objects for enhancing vapor cleaning effectiveness.
- ③ Vapor cleaning~drying provide fineness finish.

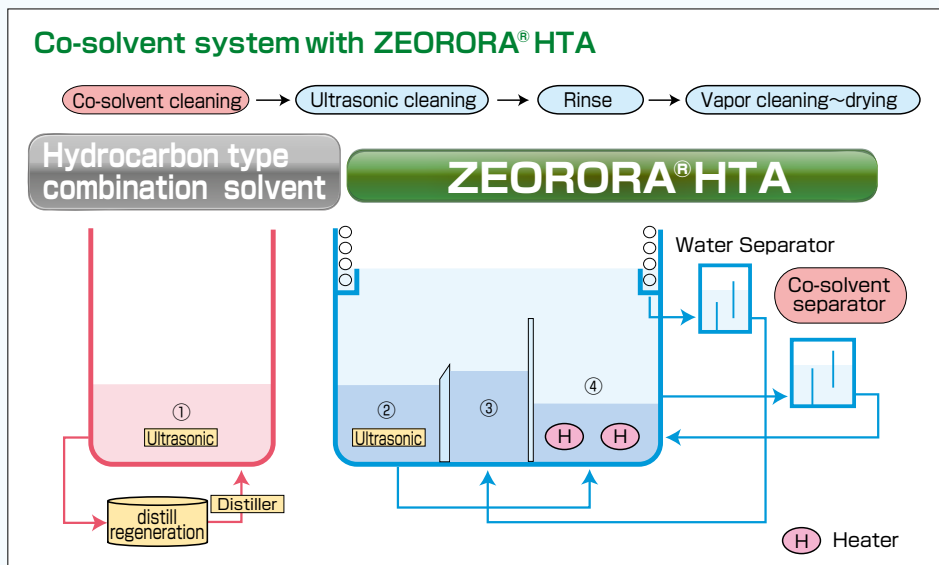

Cleaning Method :

- ① Hydrocarbon type combination solvent remove smear.
- ② Hot bath with Ultrasonic vibration rinse hydrocarbon type combination solvent.
- ③ Cool bath acts as immersion rinse and cool downing objects for enhancing vapor washing effectiveness.
- ④ Vapor cleaning~drying provide fineness finish.

Solubility of oil

Engineering oil	HCFC-225	ZEORORA®HTA			HFE-449s1			HFE-449s1+IPA		
	25°C	25°C	40°C	boiling point	25°C	40°C	boiling point	25°C	40°C	boiling point
Daphne punch oil	100	100	100	100	100	100	100	100	100	100
G-6050	100	3.5	5.4	100	1.9	2.7	4.4	2.8	3.3	5.2
G-6040	100	2.9	3.6	100	2.3	3.5	5.6	3.0	3.7	6.7
C-126	100	100	100	100	×	×	×	×	×	×
P-1600	100	4.5	5.4	100	5.8	6.8	8.6	5.9	7.2	9.3
Castor oil	100	0.6	1.0	6.9	×	×	×	×	×	×
Olive oil	100	0.2	0.7	3.8	×	×	×	×	×	×

grams of oil dissolve in 100 grams of solvent
 "100" means "the oil is compatible to the solvent"

"×" means "the oil is not dissolved to the solvent"

Products	Maker	Category	Kinetic Viscosity (40°C)	Add-in material
Daphne punch oil	IDEMITSU KOSAN CO.,LTD.	Blanking oil	1.06	Extreme pressure agent (phosphorus)
G-6050	NIHON KOHSAKUYU CO.,LTD.	Blanking oil	3.43	Oiliness agent, Chlorine compound, Anti rust agent, Anti-corrosive agent
G-6040	NIHON KOHSAKUYU CO.,LTD.	Blanking oil	5.17	Chlorine compound
C-126	NIHON KOHSAKUYU CO.,LTD.	Cutting fluids	20	Semidry, Fatty acid ester
P-1600	JX NIPPON OIL & ENERGY	Anti-rust oil		
Castor oil	reagent of KANTO CHEMICAL CO.,INC.	Vegetable oil		
Olive oil	reagent of KANTO CHEMICAL CO.,INC.	Vegetable oil		

Cleaning of silicon grease



Silicone Grease : Shin-Etsu G40 Ultrasonic, 50°Cx1min

Cleaning of epoxy resin


	JU-100-5 (Maker: KOKI)	JU-41P (Maker: KOKI)	JU-R2S (Maker: KOKI)	Result
ZEORORA®HTA				OK
HFE-449s1+IPA				NG
HFC-43-10mee+EtOH				NG
n-Decane				NG
IPA				NG
HCFC-225				OK
Ethyl acetate				OK

Epoxy resin adhesives applied to a slide was left for 24 hours before cleaning test (uncured) Ultrasonic, 20°Cx10seconds



Decrease Emission and Cost


Consumption at reflux condition

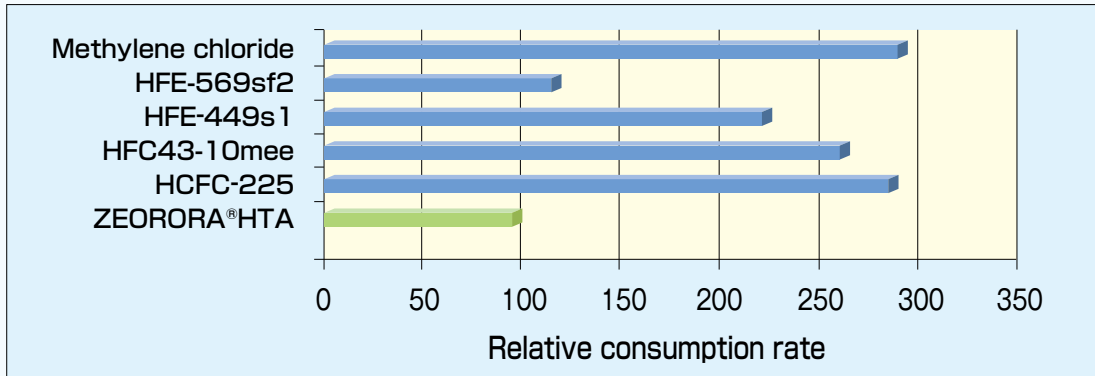

Fluorine-based solvents are required to reduce evaporation loss, in order to reduce running cost and protect environment.

ZEORORA®HTA consumption achieves less than 1/3 of HCFC-225. It is much smaller than the other Fluorine-based or Chlorine-based solvents.

Applications

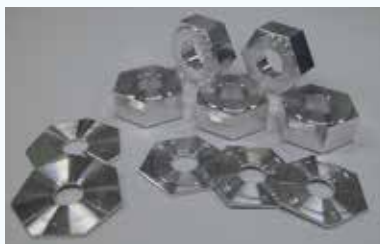


Polygon mirror



HD parts



Precision metal parts

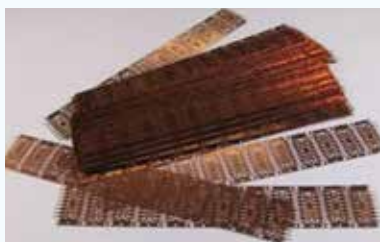

Lead frame



Printer roller



Bearing



Technical Support



R&D center

We set up solvent cleaning laboratory in Zeon R&D center, which provides technical support and cleaning evaluation.



Cleaning test room

SNAP* identified ZEORORA® H as “acceptable (to be produced without limitation)” substitute for the ozone-depleting chemical

SNAP*: The Significant New Alternatives Policy (SNAP) Program is a program of United States Environmental Protection Agency (EPA)'s program to evaluate and regulate substitutes for the ozone-depleting chemicals that are being phased out under the stratospheric ozone protection provisions of the Clean Air Act (CAA).

Disclaimers

The information contained herein is believed to be reliable, but no representations, guarantees or warranties of any kind are made as to its accuracy, suitability for particular applications or the results to be obtained therefrom.

The information is based on laboratory work with small-scale equipment and does not necessarily indicate end product performance.

Because of the variations in methods, conditions and equipment used commercially in processing these materials, no warranties or guarantees are made as to the suitability of the products for the application disclosed.

Full-scale testing and end product performance are the responsibility of the user.

ZEON CORPORATION shall not be liable for and the customer assumes all risk and liability of any use of handling of any material beyond ZEON CORPORATION direct control.

The SELLER MAKES NO WARRANTIES, EXPRESS OR IMPLIED INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Nothing contained herein is to be considered as permission, recommendation, nor as an inducement to practice any patented invention without permission of the patent owner.

ZEON ZEON CORPORATION
Specialty Chemicals Division.

1-6-2 Marunouchi, Chiyoda-ku, Tokyo, 100-8246, Japan
Tel:+81 -3-3216-0542 Fax:+81-3-3216-1303

<http://www.zeon.co.jp/>